



How to permanently attach Flex-Shaft Joystick Handles

Some users pull upwards on their joystick handles--over time, this can loosen the handle.
To solve this problem, permanently attach the handle using adhesive.



What you will need: Strong-hold hairspray, alcohol for cleaning, a cotton swab, and a joystick handle



Step 1: Clean stem of joystick module with alcohol



Step 2: Wet tip of cotton swab with hairspray



Step 3: Apply hairspray to inside surface of hole in handle



Step 4: Press and twist handle down fully onto stem, and allow to dry 1 hour